



1. Height rod calibration:

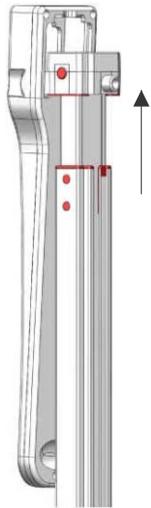


1. Pull up the height rod as figure.

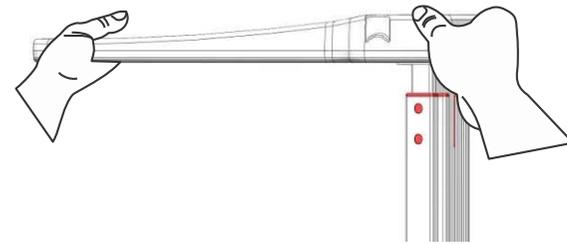


2. Place both hands in place as figure and open the height rod's head.


2. Inner height rod adjustment:

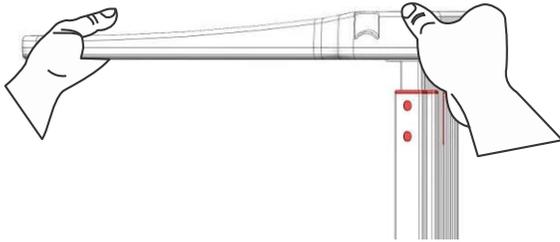


1. Place both hands in place as figure to hold the height rod's head.

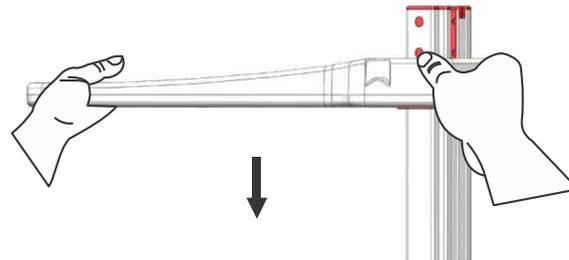


2. Pull down the height rod's head.

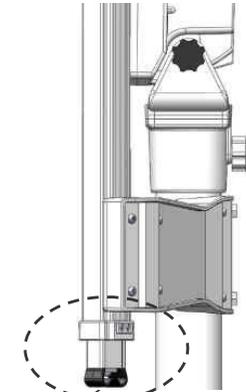

Note: If the inner height rod slide down easily, you could adjust the screw.
(Turn the screw clockwise to loosen or anti-clockwise to tighten.)

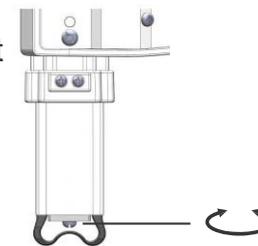

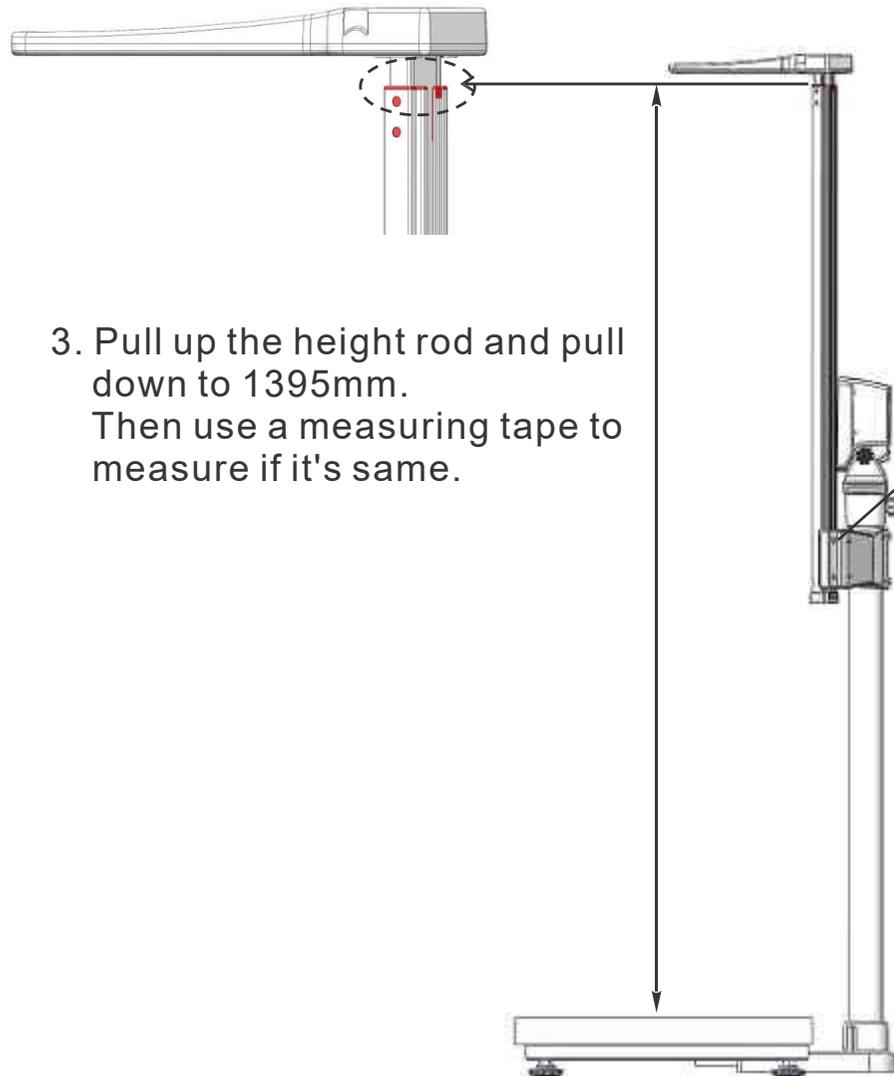

3. Pull up the height rod and pull down to 1395mm. Then use a measuring tape to measure if it's same.



4. If there is any tolerance, please loose screws first.

5. Pull the measuring rod up or down to adjust the height till no tolerance.